


Bike	Suzuki V-Strom 800 DE / V-Strom 800 RE	Part No.	RSI-131
Year	See Table Below	Fit Kit	Z039.10758
Notes	Where not supplied use original fittings.	dB Killer	SCEXDBK24 - (TYPE W)

Estimated Fitting Time: 60 Minutes

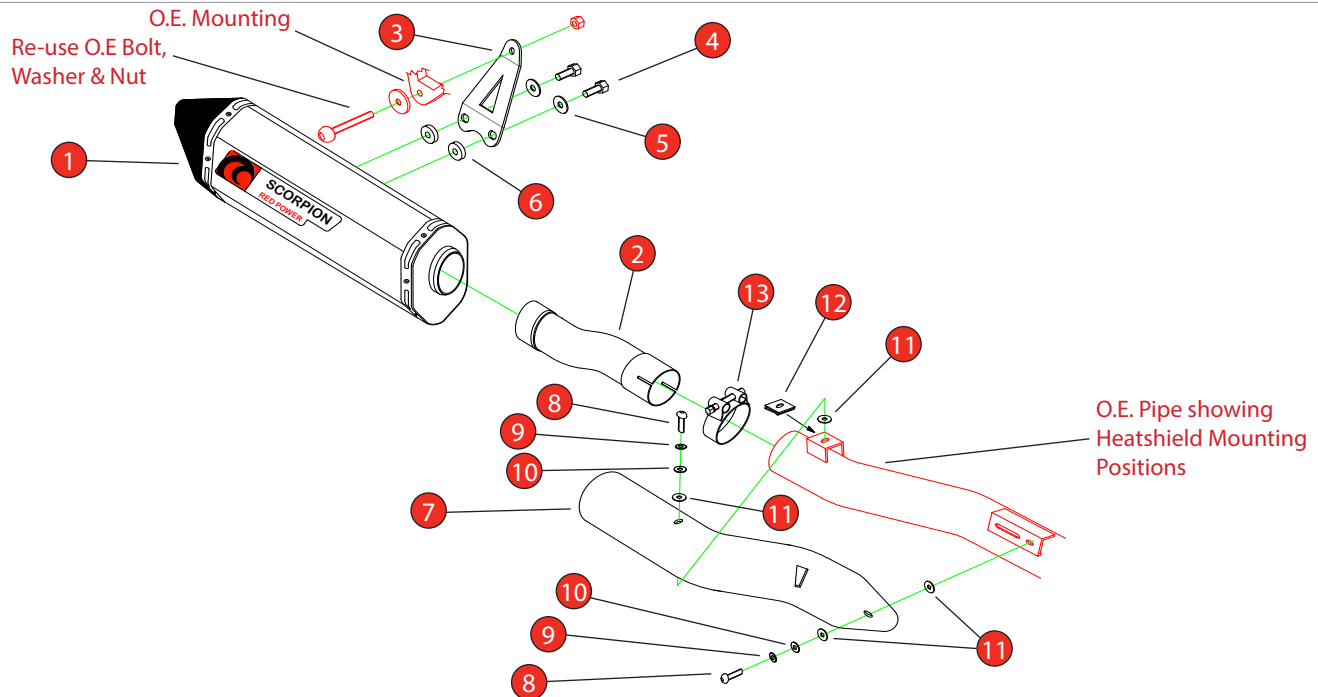

NO.	PART NO.	DESCRIPTION	QTY
1	RSC550	Serket Parallel Silencer	1
2	CP1216	Link Pipe	1
Fit Kit - Z039.10758			
3	Z015.31609	Silencer Mounting Bracket	1
4	Z017.10043	M8 x 16mm Hex Bolt	2
5	Z017.10831	M8 x 17mm Washer	2
6	Z026.20049	M8 x 5mm Alloy Spacer	2
7	Z028.20446	Black Composite Heatshield with Foil Backing	1
8	Z017.10608	M6 x 16mm Button Head Screw	2
9	Z017.10617	M6 x 12mm Washer	2
10	Z017.12795	M6 Anti-Vibration Washer	2
11	Z017.12781	M6 x 14mm Black Fibre Washer	4
12	Z017.12807	M6 Speed Nut	1
13	Z016.10002	Clamp 51-55mm	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	17/04/2025
ISSUE	00
AUTHORISED	G O'Shea



Link to a video showing the installation of the exhaust.

<https://www.youtube.com/watch?v=6XirkpzrvXQ&t=6s>

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Fitment Information

MODELS	YEARS
Suzuki V-Strom 800 DE	2023 - Current
Suzuki V-Strom 800 RE	2024 - Current



STAY CONNECTED TO RED POWER.

Bike	Suzuki V-Strom 800 DE / V-Strom 800 RE	Part No.	RSI-131
Year	See Table	Fit Kit	Z039.10758
Notes	Where not supplied use original fittings.	dB Killer	SCEXDBK24 - (TYPE W)



A) Remove the bolt from the front of the plastic heat shield then slide the shield towards the front of the bike to remove it.

B) Loosen the clamp on the silencer.

C) Remove the silencer mounting bolt.

D) Carefully remove the rear silencer and gasket.

E) Place the supplied clamp over the end of the Scorpion connecting pipe and slide it onto the original exhaust pipe. You do NOT need a gasket.

F) Place the Scorpion silencer face down on a soft, clean surface, then fit the bracket to it using the supplied spacers as per the diagram on the front page of the fitting instructions.

G) Slide the Scorpion silencer onto the connecting pipe and align the bracket with the back of the original mounting point on the frame.

H) Secure in place with the original mounting bolt and nut. Leave slightly loose for now, you will fully tighten in a later step.



Bike	Suzuki V-Strom 800 DE / V-Strom 800 RE	Part No.	RSI-131
Year	See Table	Fit Kit	Z039.10758
Notes	Where not supplied use original fittings.	dB Killer	SCEXDBK24 - (TYPE W)



I) Fully tighten the clamp.

J) Fully tighten the mounting bolts on the back of the silencer.

K) Fully tighten the mounting bolt.

L) Remove the rubber grommet from the bracket on the original exhaust.


M) Slide the supplied speed nut onto the bracket.

N) Attach the Scorpion heat shield to the original exhaust using the supplied hardware as per the diagram on the front page of the fitting instructions.



When fitted take bike for a short ride to ensure all functions are correct.

When bike & exhaust are cool enough check all nuts and bolts are still secure.

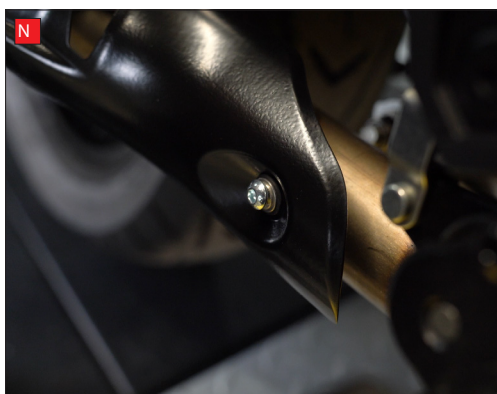

Bike	Suzuki V-Strom 800 DE / V-Strom 800 RE	Part No.	RSI-131
Year	See Table	Fit Kit	Z039.10758
Notes	Where not supplied use original fittings.	dB Killer	SCEXDBK24 - (TYPE W)



Thank you for purchasing your Scorpion Silencer.

Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Für den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.

Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.